OPERATING INSTRUCTIONS

OFFICIAL RECORDS STATION
FILE COPY
FACILITIES

TYPES 1214 -A, -D,

and -M

UNIT OSCILLATORS



GENERAL RADIO COMPANY
WEST CONCORD, MASSACHUSETTS, USA

G

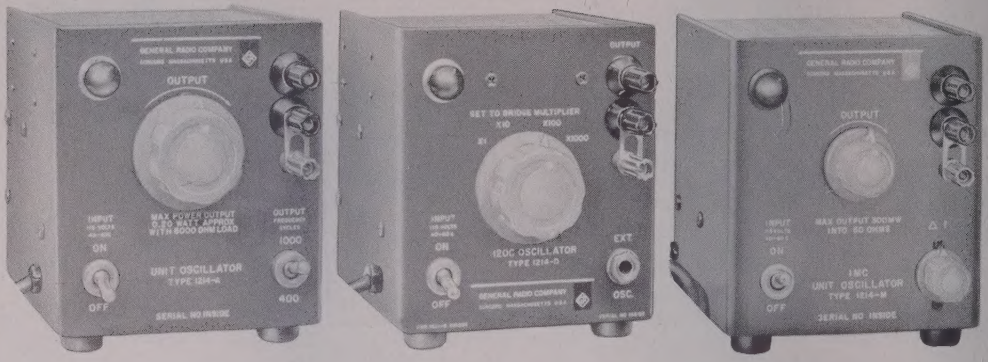

Figure 1.

(Above, left to right) Types 1214-A, 1214-D, and 1214-M Unit Oscillators.

SPECIFICATIONS

	1214-A	1214-D	1214-M
FREQUENCY	400 or 1000 cps	120 cps	1 Mc
ACCURACY	±2%	See Note A	±1%
MAX OUTPUT	200 mw into 8000Ω	400 mw into 1,10,100,1000 Ω (1611-B Bridge)	300 mw into 50Ω
OPEN-CIRCUIT OUTPUT VOLTAGE	0-60 v	45, 13, 4.5 or 1.3	0-7 v
DISTORTION	3% into 8000Ω	3% into matched load	3.5% into 50Ω
POWER INPUT	115 v, 40-60 cps	115 v, 40-60 cps	115 v, 40-60 cps
POWER CONSUMPTION	16 w	16 w	12 w
DIMENSIONS			
Width	4-3/4 inches (120 mm).	4-3/4 inches (120 mm).	4-3/4 in. (120 mm).
Height	5-1/4 inches (135 mm).	5-1/4 inches (135 mm).	5-1/4 in. (135 mm).
Depth	6 inches (155 mm).	6 inches (155 mm).	6 in. (155 mm).
NET WEIGHT	4-1/2 lb (2.1 kg)	4-1/2 lb (2.1 kg)	2-3/4 lb (1.3 kg)

Note A: ±5% when used with Type 1611-B Bridge. Open-circuit frequency is 122 cps ±2%.

TYPES 1214-A, -D, AND -M UNIT OSCILLATORS

1 PURPOSE. The Type 1214 Unit Oscillators (Figure 1) are compact, low-distortion signal sources intended primarily for use with companion General Radio instruments, but useful also as general-purpose laboratory oscillators. These Unit Oscillators cover the following frequencies:

Type	Frequency
1214-A	400, 1000 cps
1214-D	120 cps
1214-M	1 Mc

2 DESCRIPTION.

2.1 CIRCUIT. The Type 1214 Unit Oscillator includes a built-in transformerless power supply, which operates from 115 volts, 40 to 60 cps. (Direct current may be used, but performance may not be within specifications.) The oscillator is a Hartley circuit, with the coil tapped for 1000-cps operation in the -A model. The output circuit is coupled through an isolating pickup coil, and can be operated either grounded or ungrounded.

2.2 CONTROLS. Power is applied by means of an OFF-ON toggle switch on the panel. Other panel controls include a frequency selector toggle switch on the -A model, plus the following:

Name	Model	Type	Function
Output Control	A, M	Continuous rotary control	Varies output power from zero to maximum.
SET TO BRIDGE MULTIPLIER	D	4-pos selector switch	Matches output to various bridge loads.
Δf	M	Continuous rotary control	Varies frequency ±1% from 1 Mc.

2.3 CONNECTORS. The output terminals of the Type 1214 Unit Oscillator are jack-top binding posts with 3/4-inch spacing. A link and separate ground binding post below the output pair permit grounded or ungrounded operation of the oscillator.

On the Type 1214-D, the EXT OSC panel jack permits use of the Type 1214-D's matching transformer with an external audio oscillator.

3 OPERATING PROCEDURE.

3.1 TYPE 1214-A. Connect the device to be driven to the output binding posts. Connect the link between the lower two binding posts if grounded output is desired. Connect the Unit Oscillator to a 115-volt, 40-60-cps source, set the OUTPUT FREQUENCY switch to the desired frequency, and snap the power switch ON. The panel lamp should light to indicate application of power.

By means of the output control in the center of the panel, output power may be varied from zero to a maximum of 200 mw into an 8000-ohm load.

3.2 TYPE 1214-D. When the Type 1214-D Unit Oscillator is used with the Type 1611-B Capacitance Test Bridge, the Unit Oscillator output terminals should be connected to the EXT GEN terminals of the bridge. Connect the third binding post of the oscillator to an external ground, preferably at the same point at which the bridge is grounded. For grounded output, connect the link between the lower two binding posts. Set the SET TO BRIDGE MULTIPLIER switch to the position corresponding to the setting of the bridge MULTIPLY CAPACITANCE BY switch. Connect the Unit Oscillator to a 115-volt, 40-60-cps source, and snap the power switch ON. The panel lamp should light to indicate application of power.

If an external audio oscillator is to be used with the matching transformer of the Type 1214-D, connect the external oscillator to the EXT OSC jack, and connect the Type 1214-D OUTPUT to the bridge EXT GEN connector. Set the bridge filter switch to EXT and connect an external filter to the bridge EXT FILTER jack.

Under normal operation, the output voltages delivered to the Type 1611-B bridge are as follows:

Multiplier	Capacitance	Volts	Multiplier	Capacitance	Volts
X 1	1	37	X 100	100	4.8
	10	31		1000	4.8
X 10	10	16	X 1000	1000	1.6
	100	15		10,000	1.6

3.3 TYPE 1214-M. Connect the device to be driven to the output of the Type 1214-M, using either the side multipoint connector (see Figure 12 for proper connections) or the panel jack-top binding posts. For grounded output, connect the link between the lower two binding posts. Connect the Unit Oscillator to a 115-volt, 40-60-cps source, and snap the power switch ON. The panel lamp should light to indicate application of power.

By means of the output control in the center of the panel, output power can be varied from zero to 300 milliwatts into a 50-ohm load. To compensate for frequency shift with changing load conditions, or to match the output frequency to the frequency of an external filter or other tuned device, the Δf control will vary the output frequency $\pm 1\%$ from 1 Mc.

4 SERVICE AND MAINTENANCE.

4.1 GENERAL. The two-year warranty given with every General Radio instrument attests the quality of materials and workmanship in our products. When difficulties do occur, our service engineers will assist in any way possible.

In case of difficulties that cannot be eliminated by the use of these service instructions, please write or phone our Service Department, giving full information of the trouble and of steps taken to remedy it. Be sure to mention the serial and type numbers of the instrument.

Before returning an instrument to General Radio for service, please write to our Service Department or nearest district office (see back cover), requesting a Returned Material Tag. Use of this tag will insure proper handling and identification. For instruments not covered by the warranty, a purchase order should be forwarded to avoid unnecessary delay.

4.2 REMOVAL OF COVER. To remove the cover, loosen the thumbscrew on the right-hand side of the instrument and slide the cover off, away from the panel. With the cover off, tubes and fuses are accessible.

4.3 TEST VOLTAGES AND RESISTANCES. The following test voltages and resistances are given to aid in trouble-shooting. Due to the direct connection to the power line, the oscillator and power-supply circuits are not grounded to the chassis. Voltage measurements are therefore referred to pin 2 of the Type 117N7GT tube. DC voltages were measured with a 20,000-ohm/volt meter. Resistance measurements were made with pin 8 connected to pin 2, and with power off.

TABLE OF VOLTAGES

V1, PIN	VOLTS TO PIN 2		
	1214-A	1214-D	1214-M
1	0	0	0
2	0	0	0
3	112	94	112
4	-10	-45	-43
5	92	96	112
6	0	0	0
7	115 ac	115 ac	115 ac
8	123	109	116

TABLE OF RESISTANCES

V1, PIN	RESISTANCE TO GROUND (in ohms)		
	1214-A	1214-D	1214-M
1	∞	∞	∞
2	0	0	0
3	330	350	300
4	1 M	1 M	300 k
5	4.7 k	295	300
6	0	0	0
7	180	180	180
8	0	0	0

NOTE: For conditions of measurement, refer to paragraph 4.3.

PARTS LIST

			PART NO. (NOTE A)	MODEL(S)
RESISTORS (NOTE B)	R1	THYRITE	REU-8	A, D
	R1	250 ±10%	POSC-12	M
	R2	510 k ±5% 1/2 w	REC-20BF	A, D
	R2	300 k ±5% 1/2 w	REC-20BF	M
	R3	75 ±10% 1/2 w	REC-30BF	M
	R4	4.3 k ±5% 1/2 w	REC-20BF	A
	R4	100 ±5% 1/2 w	REC-20BF	M
	R5	1 M ±10% 1/2 w	REC-20BF	A, D
	R5	100 k ±10% 1/2 w	REC-20BF	M
	R6	10 k ±5%	214-C	A
	R6	100 ±5% 1/2 w	REC-20BF	M
	R7	75 ±5% 1/2 w	REC-30BF	A, D
	R8	100 k ±10% 1/2 w	REC-20BF	A, D
	R9	100 ±5% 1/2 w	REC-20BF	A, D
	R10	470 ±10% 1/2 w	REC-20BF	A, D
	R11	100 ±5% 1/2 w	REC-20BF	A, D
CAPACITORS (NOTE C)	C1	0.5 ±10% 600 dcwv	COL-72	D
	C1A	0.27 or 0.33 ±5% 400 dcwv (NOTE D)	1214-E-40	A
	C1A	30 300 dcwv	Part of COE-52	M
	C1A	0.068 ±10% 400 dcwv	1214-E-40	D
	C1B	(NOTE E) 400 dcwv	1214-E-40 or COL-71	A, D
	C1B	30 300 dcwv	Part of COE-52	M
	C1C	90 300 dcwv	Part of COE-52	M
	C2	0.01 ±10% 300 dcwv	COM-35B	A
	C2	0.047 ±10% 400 dcwv	COW-25	D
	C2	35 µµf ±10% 500 dcwv	COM-20B	M
	C3	30 300 dcwv	Part of COE-52	A
	C3	130 µµf ±10% 500 dcwv	COM-20B	M
	C3A C3B C3C	30 30 90 300 dcwv	COE-52	D
	C4	30 300 dcwv	Part of COE-52	A
	C4	4-50 µµf	COA-2	M
	C5	90 300 dcwv	Part of COE-52	A
	C6	0.001 1000 dcwv	COC-61	M
	C7	0.001 1000 dcwv	COC-61	M
	C8	0.001 1000 dcwv	COC-61	M
	C9	0.001 1000 dcwv	COC-61	M

			PART NO. (NOTE A)	MODEL(S)
MISCELLANEOUS	F1	0.4 amp Slo-Blo Type 3AG	FUF-1	A, D
	F1	0.5 amp Slo-Blo Type 3AG	FUF-1	M
	F2	0.4 amp Slo-Blo Type 3AG	FUF-1	A, D
	F2	0.5 amp Slo-Blo Type 3AG	FUF-1	M
	L1 L2	INDUCTOR INDUCTOR	1330-203-2	M
	L3	CHOKE, 2.2 mh, Waters Type C1059	CHA-55	M
	L4	CHOKE, 2.2 mh, Waters Type C1059	CHA-55	M
	P1	PILOT LAMP, 115 v	NE-51	All
	S1	SWITCH, dpst	SWT-333	All
	S2	SWITCH, dpdt	SWT-335	A
	S2	SWITCH, Rotary	SWRW-178	D
	T1	TRANSFORMER	345-455-2	A
	T1	TRANSFORMER	345-467	D
	T2	TRANSFORMER	746-428	D
	V1	TUBE	117N7-GT	All

NOTES

(A) Type designations for resistors and capacitors are as follows:

COA - Capacitor, air
COC - Capacitor, ceramic
COE - Capacitor, electrolytic
COL - Capacitor, oil
COM - Capacitor, mica
POSC - Potentiometer, composition
REC - Resistor, composition
REU - Resistor, unclassified
REW - Resistor, wire-wound

(B) All resistances are in ohms except as otherwise indicated by k (kilohms) or M (megohms).

(C) All capacitances are in microfarads, except as otherwise indicated by µµf (micromicrofarads).

(D) Value determined at General Radio laboratory.

(E) Value and type determined at General Radio laboratory.

When ordering replacement components, be sure to include complete description as well as Part Number. (Example: 100 k ±10%, 1/2 w, REC-20BF.)

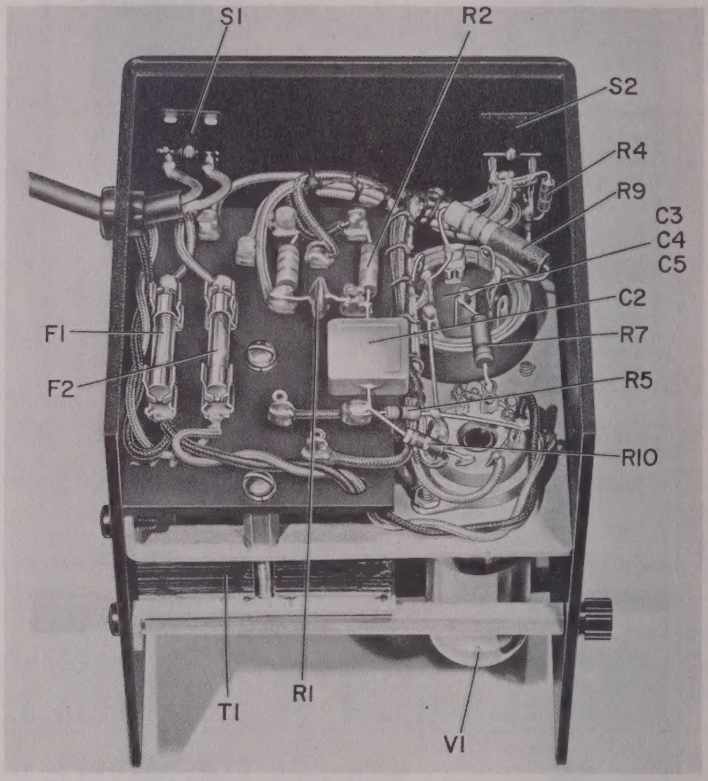

Figure 2. Interior View, Type 1214-A Unit Oscillator.

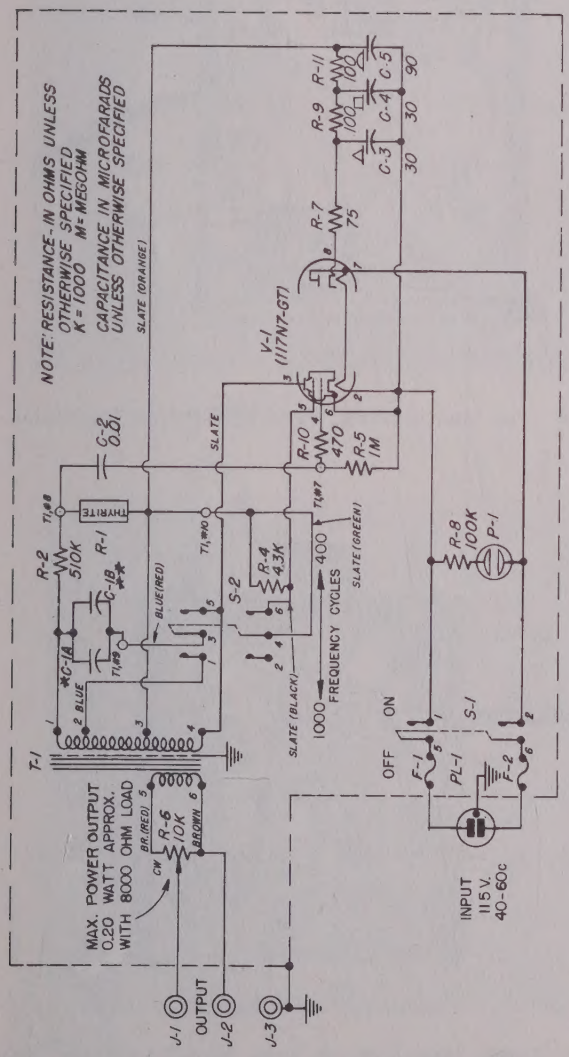

Figure 3. Schematic Diagram, Type 1214-A Unit Oscillator.

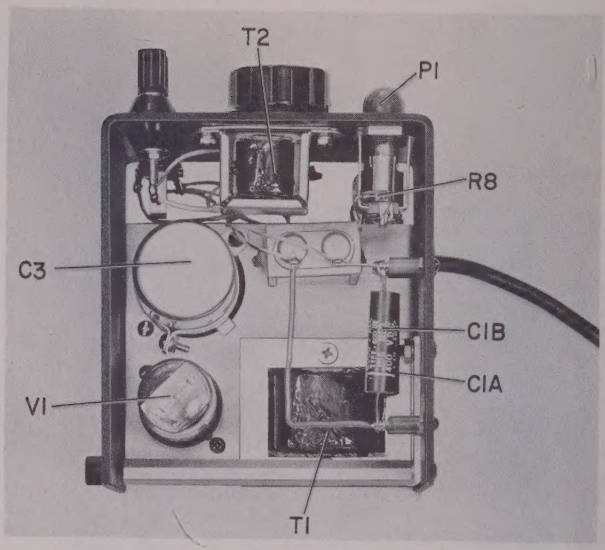

Figure 4. Top Interior View, Type 1214-D Unit Oscillator.

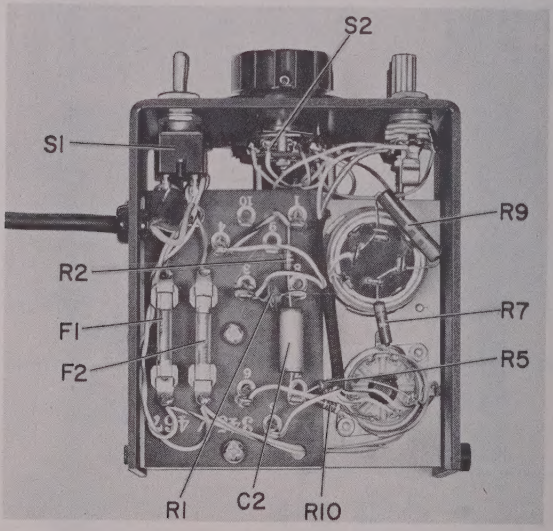

Figure 5. Bottom Interior View, Type 1214-D Unit Oscillator.

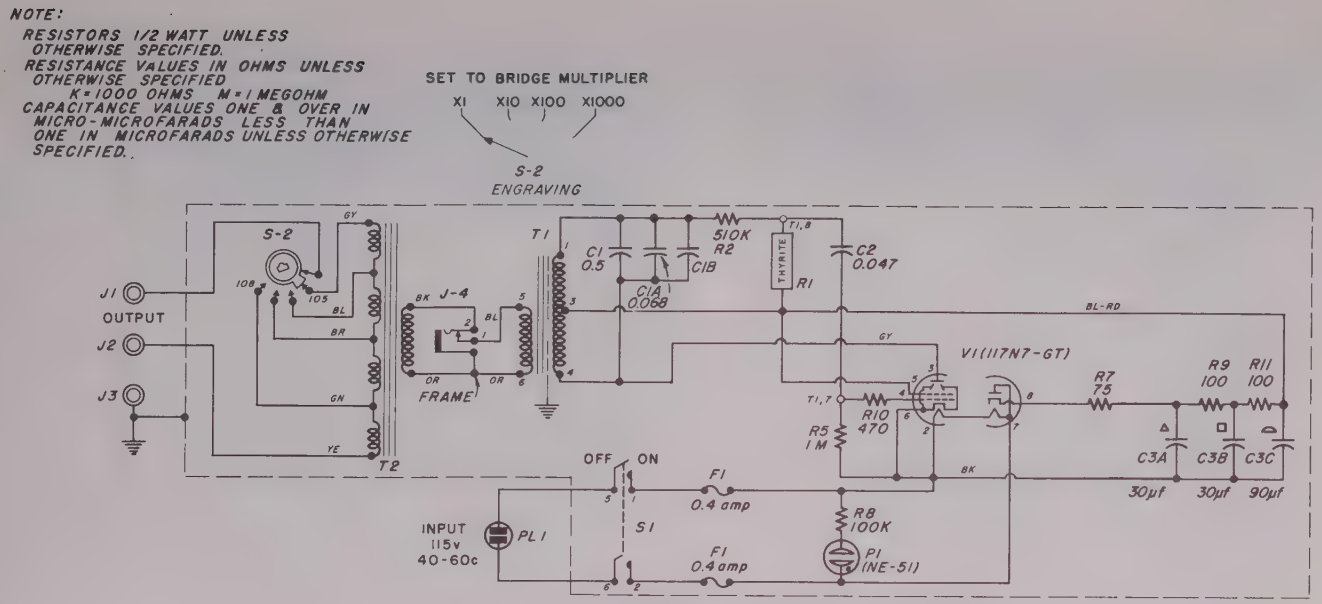

Figure 6. Schematic Diagram, Type 1214-D Unit Oscillator.

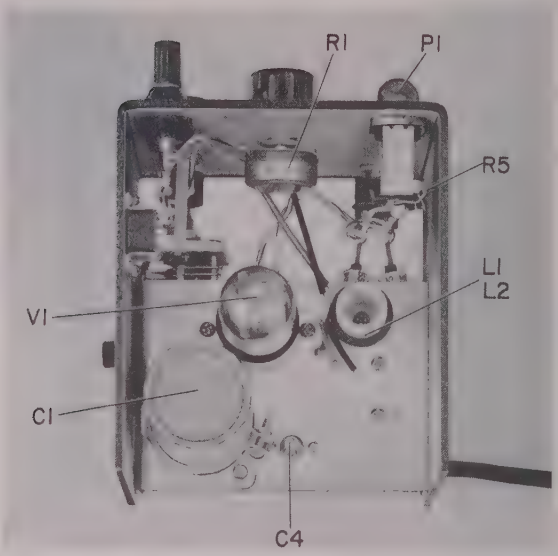

Figure 10. Top Interior View, Type 1214-M Unit Oscillator.

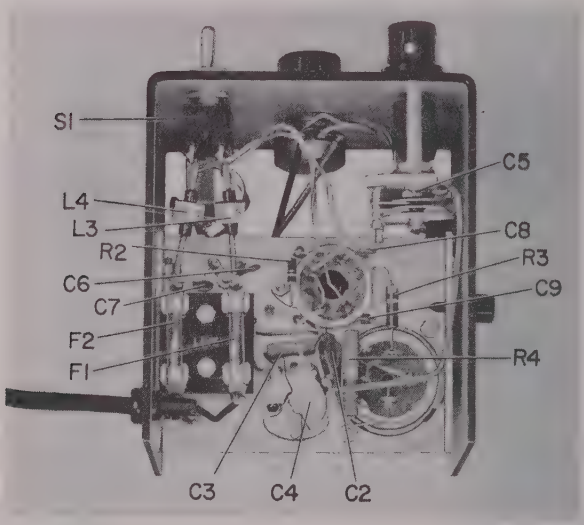

Figure 11. Bottom Interior View, Type 1214-M Unit Oscillator.

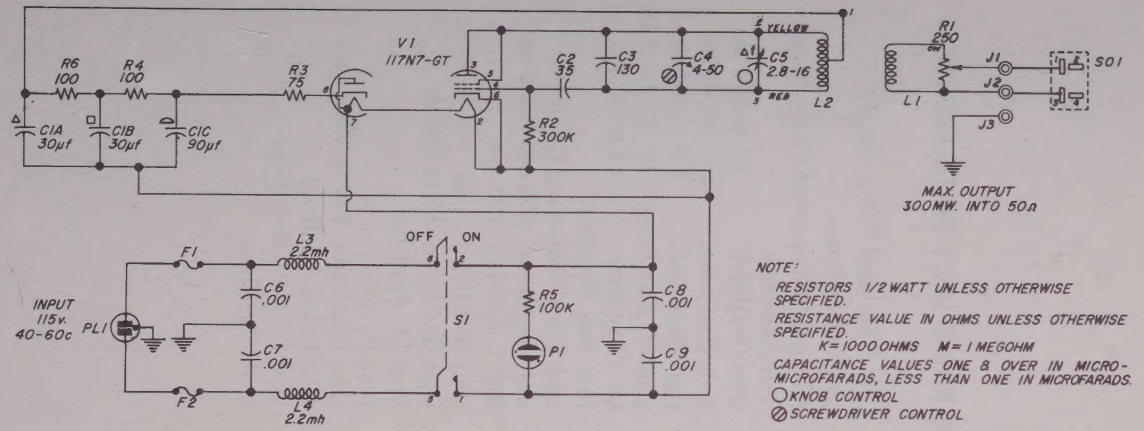

Figure 12. Schematic Diagram, Type 1214-M Unit Oscillator.

GENERAL RADIO UNIT INSTRUMENTS

Type 1201	Unit Regulated Power Supply
Type 1203	Unit Power Supply
Type 1205	Adjustable Regulated Power Supply
Type 1206	Unit Amplifier
Type 1208	Unit Oscillator 65 to 500 Mc
Type 1209-B	Unit Oscillator 250 to 920 Mc
Type 1209-BL	Unit Oscillator 180 to 600 Mc
Type 1210	Unit RC Oscillator 20 cps to .5 Mc
Type 1211	Unit Oscillator 0.5 to 50 Mc
Type 1212	Unit Null Detector
Type 1213	Unit Time/Frequency Calibrator
Type 1214-A	Unit Oscillator 400 and 1000 cps
Type 1214-D	Unit Oscillator 120 cps
Type 1214-M	Unit Oscillator 1 Mc
Type 1215	Unit Oscillator 50 to 250 Mc
Type 1216	Unit I-F Amplifier
Type 1217	Unit Pulser
Type 1218	Unit Oscillator 900 to 2000 Mc
Type 1219	Unit Pulse Amplifier
Type 1220	Unit Klystron Oscillator
Type 1361	UHF Oscillator

GENERAL RADIO COMPANY

WEST CONCORD, MASSACHUSETTS

EMerson 9-4400 Mission 6-7400

DISTRICT OFFICES

NEW YORK

Broad Ave. at Linden, Ridgefield, N. J.
Telephone N.Y. WOrth 4-2722
N.J. WHitney 3-3140

PHILADELPHIA

1150 York Rd., Abington, Penna.
Telephone TUrner 7-8486
Phila., HAncock 4-7419

WASHINGTON

8055 13th St., Silver Spring, Md.
Telephone JUniper 5-1088

CHICAGO

6605 West North Ave., Oak Park, Ill.
Telephone VIllage 8-9400

LOS ANGELES

1000 N. Seward St., Los Angeles 38, Calif.
Telephone HOllywood 9-6201

SAN FRANCISCO

1186 Los Altos Ave., Los Altos, Calif.
Telephone WHitecliff 8-8233

CANADA

99 Floral Pkwy., Toronto 15, Ont.
Telephone CHerry 6-2171

REPAIR SERVICES

EAST COAST

General Radio Company
Service Department
22 Baker Ave., W. Concord, Mass.
Telephone EMerson 9-4400

NEW YORK

General Radio Company
Service Department
Broad Ave. at Linden, Ridgefield, N. J.
Telephone N.Y. WOrth 4-2722
N.J. WHitney 3-3140

MIDWEST

General Radio Company
Service Department
6605 West North Ave., Oak Park, Ill.
Telephone VIllage 8-9400

WEST COAST

General Radio Company
Service Department
1000 N. Seward St., Los Angeles 38, Calif.
Telephone HOllywood 9-6201

CANADA

Bayly Engineering, Ltd.
First Street, Ajax, Ontario
Telephone Toronto EMpire 2-3741

www.manualsplus.com

1022720

(Repres Countries)

Printed in USA